



■ 按裝方式：

- Step 1. Put the F.S.T.S in the buckle of Front Side.

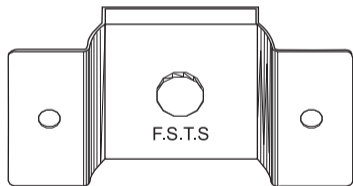

- Step 2. Wrap up on the pipe.

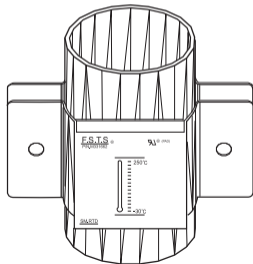

- Step 3. Turn the Screw to tighten it.

